

## QUICK REFERENCE GUIDE FOR THE DSC 832 (LED Keypad)

### **To Arm:**

If the Ready light is ON, the system is ready for arming. If the Ready light is OFF, check to see that all doors and windows are closed and that motion is stopped in areas covered by motion detectors.

Enter your access code. If the access code was entered incorrectly, the keypad buzzer will sound steadily for two seconds. If this occurs, press the [#] key and re-enter your access code. If the correct access code is entered, the keypad sounder will beep quickly and the Armed light will come ON. Immediately exit the premises through your Exit/Entry door.

### **To Disarm:**

Enter the premises through your Exit/Entry door. The keypad will beep to indicate that the system should be disarmed. Enter your access code at the keypad. If an error is made entering the code, enter your code again. As soon as the correct code is entered, the Armed light will go out and the keypad will stop beeping.

If an alarm occurred while the system was armed, the Memory light and the zone light corresponding to the zone which caused the alarm will flash for 30 seconds. After the 30 second period, the Memory light and zone light will stop flashing and the panel will return to the Ready state. Pressing the [#] key during the 30 second period will cancel the alarm memory display. To view other alarms, press [\*] [3].

### **To Bypass an Individual Zone when Arming:**

Start with the system in the Ready state. Enter [\*][1][Zone number(s) to be bypassed]. Enter the zone number(s) as a double digit from 01 to 32. As each zone is bypassed, the corresponding zone light will turn ON. If a zone is bypassed by mistake, press that zone number again and the zone light will turn OFF, indicating that the zone is not bypassed. Press [#] to return to the Ready state. When the system is armed, the Bypass light will be ON if one or more zones are bypassed.

NOTE: Bypassed zones are automatically cancelled each time the system is disarmed and must be reapplied before the next arming.

**Door Chime Feature:** Enter [\*][4] to turn the door chime feature ON and OFF. When the command is entered, the keypad buzzer will beep 3 times if the door chime feature is enabled and will sound one long beep if it is disabled. Press [#] to return to the Ready state.

**For False Alarms:** Call Central Station. You must have your account number and password.

**For Service:** Call 1-800-570-6478