

## Napco Gemini P816 Basic Commands

**Zones** 16 hardwired or wireless

**Battery** 12 volt rechargeable Gel-Cell inside main panel  
 AC Transformer is 16-volts plugged in somewhere in house

Door/Window Sensors	1 3-Volt Lithium Model DL123A
Glassbreaks	2 3-Volt Lithium Model DL123A
Motions	2 3-Volt Lithium Model DL123A
Keyfob	2 3-Volt Lithium Flat type (not sure of model)
Remote Panic	2 Energizer 386 1.5-Volt Silver Oxide
Smoke Detector	2 9-volt Alkaline

**Wireless** Yes

**Downloadable** Yes

**Panic Buttons**

Fire Panic	Press 7/F + *
Medical Panic	Press 8/A + *
Police Panic	Press 9/P + *

**Arm Away** User Code + ON/OFF (Armed light will turn ON)  
 (Flashing P means Zone(s) are open)

**Arm Stay** INTERIOR + User Code + ON/OFF (Interior light will turn ON)  
 (Flashing P means Zone(s) are open)

**Instant Arm** User Code + ON/OFF + INSTANT (Armed light will flash rapidly)

**Quick Arm** Press ON/OFF (If Enabled)

**Disarm** User Code + ON/OFF (Press RESET to clear mistakes)

**Silence Alarm** User Code + ON/OFF

**Reset Smoke** User Code + ON/OFF + RESET twice

**Bypass** BYPASS + Zone (01 to 16) (Bypassed zone will slowly flash)  
 or  
 User Code + BYPASS + Zone (01 to 16)

**Siren Test** User Code + Function  
 Press INSTANT until 3 or "Bell Test" appears  
 Press INTERIOR to sound siren for 2 seconds

**Set Time** System clock can only be set by installer or by downloading

**Door Chime**

1. Enter User Code then press FUNCTION to enter Program Menu
2. If LED Keypad press INSTANT until 07 appears in display  
 IF LCD Keypad press INSTANT until "Activate Chime ?"
3. Press INTERIOR to Enable or Disable
4. Press RESET to exit

**Phone Test**

1. Enter User Code then press FUNCTION to enter Program Menu
2. If LED Keypad press INSTANT until 15 appears in display  
 If LCD Keypad press INSTANT until "Activate Telephone Test?" appears
3. Press INTERIOR to enable Phone Test, if Fail a trouble "3" will appear
4. Press RESET to exit

**Sensor Test** Arm system and activate sensors  
 (Wireless motions require no movement for 4 minutes prior to testing)

### Keypad Function Menu (User Mode)

To skip a function press INSTANT (No)

To enter a function press INTERIOR (Yes) or ON/OFF

To scroll forward through press FUNCTION, to scroll backwards press BYPASS

To exit press RESETor wait 1 minute

### LED Keypads

### LCD Keypads

01	Display Zone Status?	(Displays open zones, press NEXT or PRIOR to scroll)
02	Display Zones Bypassed?	(Displays bypassed zones, press NEXT orPRIOR to scroll)
03	Activate Bell Test?	(Tests siren, press INTERIOR for 2 second test)
04	Display System Troubles?	(Displays 1 or 2 digit trouble code, see TROUBLE section)
05	Display Fire Alarms?	(Displays Fire Alarms, press NEXT orPRIOR to scroll)
06	Display Fire Troubles?	(Displays Fire Troubles, press NEXT orPRIOR to scroll)
07	Activate Chime?	(Turns Door Chime ON and OFF)
08	Activate Watch Mode?	(Enables Day Zones, arm then disarm to deactivate)

- |    |                           |   |
|----|---------------------------|---|
| 09 | Reset System Trouble?     | (Manually resets some troubles)               |
| 10 |                           | (Installers only, normally do not use)        |
| 11 | Start Exit Time?          | (Normally do not use)                         |
| 12 | Activate Fault Fine?      | (Installers only, normally do not use)        |
| 13 | Activate Locate?          | (Installers only, normally do not use)        |
| 14 | Activate EZM Zone Find?   | (Installers only, normally do not use)        |
| 15 | Activate Telephone Test?  | (Sends test signal to central station)        |
| 16 | Delay Arming 1 - 4 Hours? | (Normally do not use)                         |
| 17 | Activate Program?         | (Enters User Programming from Keypad #1 only) |
| 18 | Activate Download?        | (Begins download, normally do not use)        |
| 19 | Relay Control?            | (Turns ON or OFF Relays (light control etc))  |
- To exit press RESET or wait 1 minute